

ThermTec

HUNT PRO Series

Thermal Clip-On Hunt PRO User Manual

 
 


Download on the
App Store

GET IT ON
Google Play



V3.0

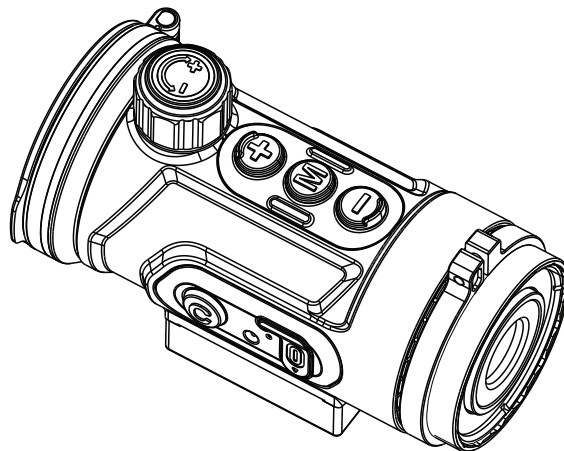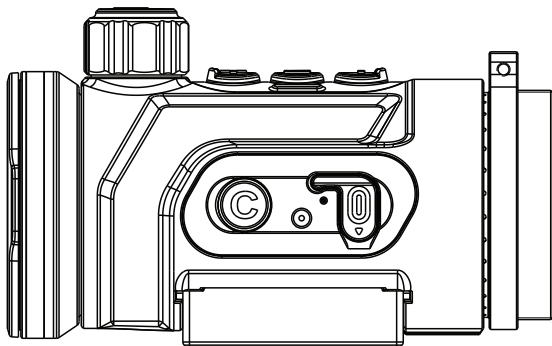

Legal Information

COPYRIGHT © 2025 ThermTec Technology Co., Ltd. ALL RIGHTS RESERVED.

About this Manual

The Manual includes instructions for using and managing the product, pictures, charts, images and all other information hereinafter are for explanation and description only. The information contained in the Manual is subject to change, without notice due to firmware updates or other reasons. Please find the latest version of this Manual at the ThermTec website (<https://www.thermeyeretec.com>).

Please use this Manual with the guidance and assistance of professionals trained in supporting the product.

Trademarks

ThermTec and other ThermTec's trademarks and logos are the properties of ThermTec in various jurisdictions. Other trademarks and logos mentioned are the properties of their respective owners.

Disclaimer

To the maximum extent permitted by applicable law, this Manual and the product described, with its hardware, software and firmware, are provided "As is" and "With all faults and errors". ThermTec makes no warranties, express or implied, including without limitation, merchantability, satisfactory quality, or fitness for a particular purpose. The use of the product by you is at your own risk. In no event will ThermTec be liable to you for any special, consequential, incidental, or indirect damages, including, among others, damages for loss of business profits, business interruption, or loss of data, corruption of systems, or loss of documentation, whether based on breach of contract, tort (including negligence), product liability, or otherwise, in connection with the use of the product, even if ThermTec has been advised of the possibility of such damages or loss.

You acknowledge that the nature of the internet provides for inherent security risks, and ThermTec shall not take any responsibilities for abnormal operation, privacy leakage or other damages resulting from cyber-attack, hacker attack, virus infection, or other internet security risks; however, ThermTec will provide timely technical support if required.

You agree to use this product in compliance with all applicable laws, and you are solely responsible for ensuring that your use conforms to the applicable law. Especially, you are responsible, for using this product in a manner that does not infringe on the rights of third parties, including without limitation, rights of publicity, intellectual property rights, or data protection and other privacy rights. You shall not use this product for any prohibited end-uses, including the development or production of weapons of mass destruction, the development or production of chemical or biological weapons, any activities in the context related to any nuclear explosive or unsafe nuclear fuel-cycle, or in support of human rights abuses.

In the event of any conflicts between this manual and the applicable law, the latter prevails.



Content

SAFETY INFORMATION	06	6.7 Day and Night Modes	18
REGULATORY INFORMATION	08	6.8 UI Zooming	18
1. DESCRIPTION	09	6.9 AI Rangefinder	19
2. FEATURES	09	6.10 OLED Brightness Adjustment	19
3. SPECIFICATIONS	10	6.11 OSD Function	19
4. PACKING LIST	11	6.12 Power Supply	20
5. COMPONENTS AND CONTROLS	12	7. MAIN MENU	21
5.1 Appearance of Hunt Pro	12	8. ZEROING	33
5.2 Description of Controls	13	9. CAPTURING AND RECORDING	35
5.3 Menu/Status Bar Icons	14	10. MEMORY ACCESS	37
6. OPERATION GUIDE	15	11. HOTSPOT FUNCTION	37
6.1 Installation	15	12. REMOTE CONTROL	39
6.2 Power On/Off	17	13. DOWNLOAD “ThermTec Outdoor” APP	40
6.3 Image Correction	17	14. TECHNICAL INSPECTION	41
6.4 Standby Mode	17	15. MAINTENANCE	41
6.5 Lens Focus Adjustment	17	16. FIRMWARE UPGRADE	41
6.6 Pseudo Color Switch	18	17. HUNT PRO ACCESSORIES	43

SAFETY INFORMATION

Environmental influences

Notes: Never point the lens of the device directly at intense heat sources such as the sun or laser equipment. The objective lens and eyepiece can function as a burning glass and damage the interior components.

Risk of swallowing

Caution: Do not place this device in the hands of small children. Incorrect handling can cause small parts to come loose which may be swallowed.

Safety instructions for use

- Do not expose the device to fire or high temperatures.
- The battery capacity decreases when operated in a cold ambient temperature. This is not a fault and occurs for technical reasons.
- Always store the device in a dry, well-ventilated space. For prolonged storage, remove the batteries.
- Do not expose your device to extreme temperatures lower than - 20°C and higher than + 50°C.
- The product shall only be connected to a USB Type C interface.
- If the device has been damaged or the battery is defective, send the device to our after-sales service for repair.

User information on the disposal of electrical and electronic devices (private households)

The WEEE symbol on products and/or accompanying documents indicates that used electrical and electronic products must not be mixed with ordinary household waste. For proper treatment, recovery and recycling, take these products to the appropriate collection points where they will be accepted without charge. In some countries, it may also be possible to return these products to your local retailer when you purchase a corresponding new product. The proper

disposal of this product serves to protect the environment and prevents possible harmful effects on human beings and their surroundings, which may arise as a result of incorrect handling of waste.

More detailed information on your nearest collection point is available from your local authority. In accordance with state legislation, penalties may be imposed for the improper disposal of this type of waste.

For business customers within the European Union

Please contact your dealer or supplier regarding the disposal of electrical and electronic devices from which could provide you with further information.

Information on disposal in other countries outside of the European Union

This symbol is only applicable in the European Union. Please contact your local authority or dealer if you wish to dispose of this product and ask for a disposal option.

Intended use

The device is intended for displaying heat signatures during nature observation, remote hunting observations and for civil use. This device is not a toy for children.

Use the device only as described in this instruction manual. The manufacturer and the dealer accept no liability for damages which arise due to non-intended or incorrect use.

Function test

- Before use, please ensure that your device has no visible damage.
- Test to see if the device displays a clear, undisturbed image.
- Check that the settings for the thermal imaging camera are correct. See the notes in the Operation section .

REGULATORY INFORMATION



This product and - if applicable - the supplied accessories too are marked with "CE" and comply therefore with the applicable harmonized European standards listed under the Directive 2014/53/EU(RED), Directive 2014/30/EU(EMC), Directive 2014/35/EU(LVD), Directive 2011/65/EU(RoHS).



This product and - if applicable - the supplied accessories too are marked with "UKCA" and comply therefore with the following directives: Radio Equipment Regulations 2017, Electromagnetic Compatibility Regulations 2016, Electrical Equipment (Safety) Regulations 2016, the Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012.



This product and - if applicable - the supplied accessories too are marked with "RoHS" and comply therefore the requirements of Directive 2011/65/EU on the restriction of the use of certain hazardous substances in electrical and electronic equipment ("RoHS recast" or "RoHS 2").



2012/19/EU (WEEE directive): Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon the purchase of equivalent new equipment, or dispose of it at designated collection points. For more information see: www.recyclethis.info.



Directive 2006/66/EC and its amendment 2013/56/EU (Battery Directive): This product contains a battery that cannot be disposed of as unsorted municipal waste in the European Union. See the product documentation for specific battery information. The battery is marked with this symbol, which may include lettering to indicate cadmium (Cd), lead (Pb), or mercury (Hg). For proper recycling, return the battery to your supplier or to a designated collection point. For more information see: www.recyclethis.info.

1.DESRIPTION

The Hunt Pro Series Thermal Clip-On featuring high thermal sensitivity ensures perfect detail recognition even in the hardest weather conditions when the object and background are with minimal temperature difference. Except that, using Hunt Pro series thermal clip-on includes several benefits over night hunting with traditional optics or even the night vision devices. Attaching the Hunt Pro series to a day scope delivers the same level of comforts of shooting with the day scope you are accustomed to, including your existing reticle and eye relief. The Hunt Pro series thermal clip-on even allows you to continue utilizing variable magnifications of your day scope.

2.FEATURES



HUNT 335PRO

HUNT 635PRO



HUNT 650PRO

- 384*288/640x512 thermal resolution, NETD \leq 15mK;
- 1920x1080@4.5 μ m with 0.39-inch OLED display;
- Lightweight of 399g and compact design;
- 2 Replaceable & rechargeable batteries with up to 7 hours each one;
- 2-in-1 design with clip-on mode and monocular mode;
- Self-learning image correction;
- Ultra-long image stability;
- Target detection range up to 2600m;
- Magnesium alloy housing;
- Reticle in playback;
- Audio and recoil-activated video supported;
- Wireless remote control;
- App connection via Wi-Fi supported;
- Clear Image with up to 16x day scope compatibility;
- Ultra-precise 1.1cm@100m click value for enhanced zeroing accuracy;

3.SPECIFICATIONS

Model	HuntPRO 335	HuntPRO 635	HuntPRO 650
Microbolometer			
Type	Uncooled		
Resolution	384x288	640x512	
Pixel pitch	12μm		
NETD	≤15mK		
Spectral range	8-14μm		
Frame rate	50HZ		
Detection range	1,800m		2,600m
Optics			
Objective lens	35mm/F0.9	35mm/F1.0	50mm/F1.0
Field of view	7.5°x5.7°	12.5°x10°	8.8°x7.0°
Magnification of the day scope	1-12X	1-16X	
Magnification	X1		
Display			
Type	AMOLED		
Resolution, pixel	1920x1080@4.5μm		
Display size	0.39 inch		
Function			
Max. recoil power on rifled weapon	6,000J		

Image correction	Via shutter		
USB interface	Type-C		
Video Recorder			
Photo/video playback	Yes		
Built-in memory	64GB		
Interface			
Type C	Data transfer, battery charging		
Wi-Fi	Yes		
Bluetooth	Yes, Remote control		
Battery			
Built-in battery	7h	6h	6h
Environment			
Body material	Magnesium alloy		
Connection thread	M52×0.75		
Operating temperature	-20- +50℃		
IP rating	IP67		
Weight, g	399g	399g	399g
Dimension, mm	120(L)x66(W) x77(H)	118(L)x66(W) x77(H)	124(L)x70(W) x77(H)

Notes:

1. The actual operating time depends on the intensity of using Wi-Fi, video recorder, and AI rangefinder.

2. Improvements may be made to the design and software of this product to enhance its useful features. The specifications of the device may be improved without prior notice.

4.PACKING LIST



User manual (x1)



Lens cloth (x1)



Hunt pro clip-on (x1)



Remote control (x1)



USB cable (x1)



Charger(x1)



Cotton swabs(x1)

5. COMPONENTS AND CONTROLS









5.1 Appearance of Hunt Pro

1. Eyepiece
2. M52*0.75 connection thread
3. Eyepiece bayonet-type ring
4. OLED Brightness adjustment / OSD / AI rangefinder / Down button
5. Capture/Record/Menu button
6. Pseudo color switch / Day&night mode / UI zooming / Up button
7. Lens focus knob
8. Lens cover
9. Objective lens
10. Power/Image correction button
11. Type-C port











5.2 Description of Controls











 
Clip-on Mode











Before entering the main menu			
Icon	Short press	Press and hold-on	Double click
	Standby mode	Power on/off	Image Calibration
	Capture	Record	Main menu
	Switch pseudo colors	Day&night mode	UI zooming
	OLED brightness adjustment	OSD on/off	AI rangefinder on/off
After entering the main menu			
Icon	Short press	Press and hold-on	Double click
	Standby mode	Power on/off	Image Calibration
	Confirm	Exit	N/A
	Up	N/A	N/A
	Down	N/A	N/A

Monocular Mode

Before entering the main menu			
Icon	Short press	Press and hold-on	Double click
	Standby mode	Power on/off	Image Calibration
	Capture	Record	Main menu
	Switch pseudo colors	Rapid Zoom	N/A
	Zoom	N/A	AI rangefinder on/off
After entering the main menu			
Icon	Short press	Press and hold-on	Double click
	Standby mode	Power on/off	Image Calibration
	Confirm	Exit	N/A
	Up	N/A	N/A
	Down	N/A	N/A

5.3 Menu/Status Bar Icons

	Image set
	Battery power
	Zero profile
	Zeroing
	Hotspot/Bluetooth
	File
	Blind Pixel
	OLED
	Recoil-Activated Video (RAV)
	Palette
	Eyepiece Set

	Time and Date
	Language
	Correction
	System Setting
	Hotspot Indicator
	AI Rangefinder
	Remote Control
	Image Capturing/Video Recording
	MIC
	System

6. OPERATION GUIDE

WARNINGS

The Hunt Pro series has been designed for long-term use. To ensure sustainable performance, please adhere to the following:

- Before use make sure that you have mounted and adjusted the device according to the section “**Operation Guide**”.
- Store with the lens cap on in the carrying case.
- Switch off the device after use.

Attempts to disassemble or repair the device will void the warranty!

 
- The device is designed for use in various operating temperatures. However, if it has been brought indoors from cold temperatures, do not turn it on for 2 to 3 hours. This will prevent external optical surfaces from condensation.
- To ensure reliable performance, it is recommended to carry out regular technical inspections of the device.

6.1 Installation

Hunt Pro as an attachment is designed to use both in the nighttime and daytime under inclement weather (fog, smog, rain, etc.).


To mount it on a day scope, please follow the below instructions:

- Please make sure that the day scope is zeroed before installation.
- Measure the outer diameter of the lens of your day scope.
- Select an appropriate adapter with the internal thread M52*0.75 and an insert of the required diameter depending on the outer diameter of your day scope's objective lens.
- Install the insert into the adapter all the way in.
- Install firmly the adapter with the insert onto the objective lens of your day scope.
- Check that the adapter firmly fits the objective lens.

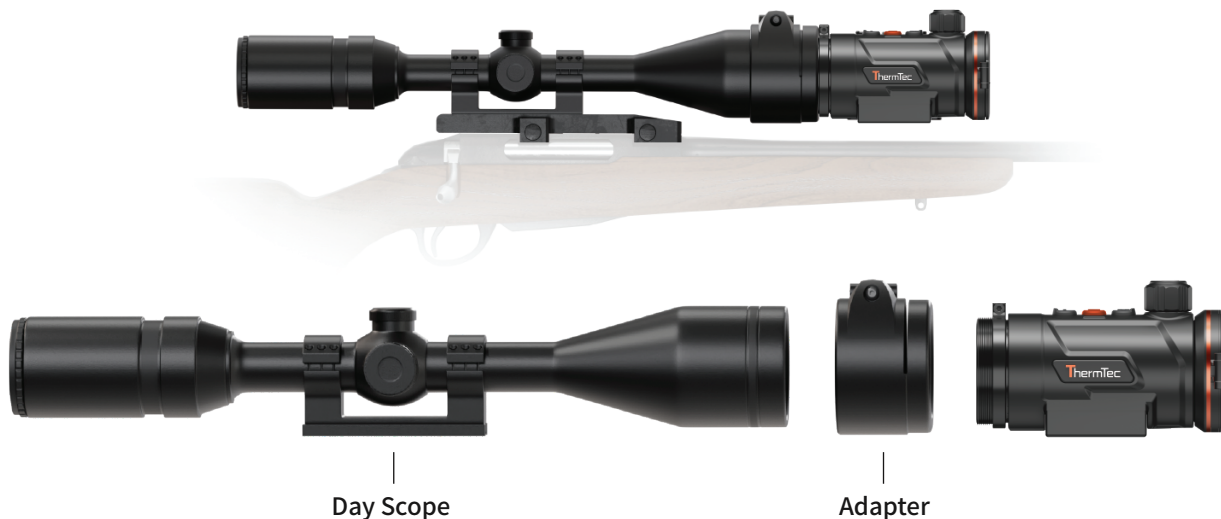


- If you see there is a clearance, please:
 - Loosen the locking screw with the hex-nut wrench (which depends on the adapter you used).
 - Tighten the screw with hex-nut wrench with a clamping force necessary to ensure that the adapter fits tightly the objective lens.
 - Tighten the locking screw.
- Mount the Hunt Pro onto the adapter, and tighten the eyepiece bayonet-type ring counter clockwise to lock Hunt Pro.
- After installation, if the center of Hunt Pro' s display is not aligned with the center of your day scope:
 - Loosen the locking screw with the hex-nut wrench.

6.2 Power On/Off

Long press the power button  for 3s to power on/off the Hunt Pro.

6.3 Image Correction

Double click the power button  for image correction. Please refer to the “Correction” section for detailed guidance of image correction.

6.4 Standby Mode

Short press the power button  to standby the device for power saving, and press the power button  again to wake it up.



6.5 Lens Focus Adjustment

Open the lens cover, rotate the lens focus knob to focus on the object being observed.

6.6 Pseudo Color Switch

 
Short press **+** to change the pseudo colors. There are totally six pseudo colors (white hot, black hot, red hot, green, golden, violet) for user choice.



White




Black

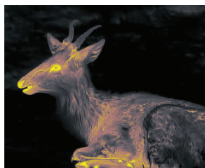


Golden



 Red

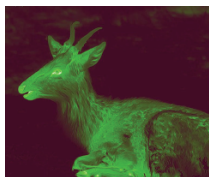

Green

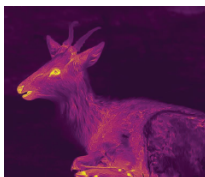 

Violet

6.7 Day and Night Modes

Long press **+** to switch different brightness modes.


6.8 UI Zooming

Double click **+** to zoom in/out the UI icons to be well suited to the variable magnifications of your day optics.






6.9 AI Rangefinder


AI rangefinder function is used to check the distance of the target. Double click  to turn on/off the AI rangefinder function. You will see distance information on the display after activating this function.



6.10 OLED Brightness Adjustment

Short press  to adjust the OLED brightness level to make the image brighter or dimmer. There are 1-5 brightness levels for selection.

6.11 OSD Function

Long press  to turn on/off the OSD function. Video recording includes the menu on the screen after turning on the OSD function.

6.12 Power Supply


Hunt Pro can be charged directly or the battery can be removed and charge the battery with the given charger.




7.MAIN MENU

- On the home screen, double click the menu button “M” to enter the main menu interface.
- In the main menu, short press the “+ / -” button to switch the menu options.
- Short press the menu button “M” to adjust the parameters of present option.
- Press and hold the down menu button “M” for 3 seconds to exit to the home screen.
- Short press the Menu button “M” to save.

Main Menu function descriptions

<p>Image Set</p> 	<div data-bbox="335 524 805 872"></div> <div data-bbox="858 501 1140 532"><h4>Turn Image set on/off</h4></div> <div data-bbox="858 560 1360 893"><ul style="list-style-type: none">● Double click the menu button “M” to enter the main menu.● Select the Image Set option with the “+ / -” button. Short press the menu button “M” to enter Image Set.● The icon will be turned into blue when Image set is selected.● Set the parameters including Sharpness, Contrast, Brightness and Denoise as needed. These parameters are ranged from 1-10.</div>
--	--

 
Zero Profile

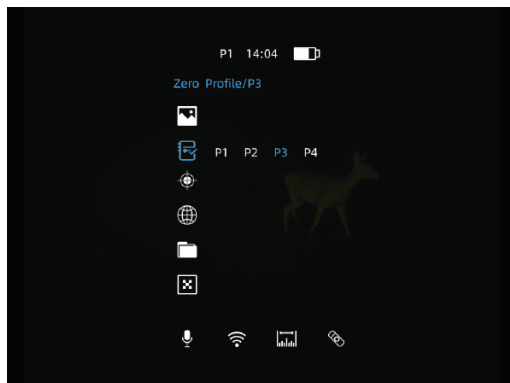

Select the Zero Profile

- Double click the menu button “M” to enter the main menu.
- Select the **Zero Profile** option with the “+ / -” button. Short press menu button “M” to enter **Zero Profile**.
- The icon will be turned into blue when **Zero Profile** is selected.
- There are four profile options: P1/P2/P3/P4. It will show at the top of the screen when a certain **Zero Profile** is selected.
- Short press the menu button “M” to confirm the selection of one profile.

 
Zeroing

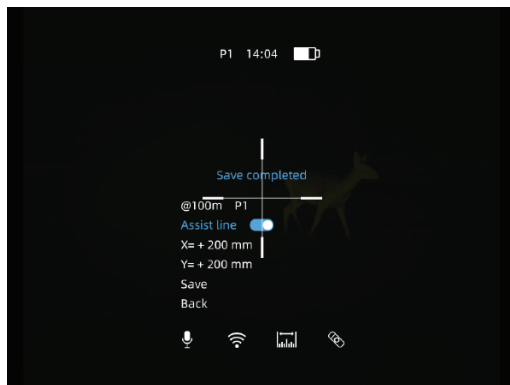

Zeroing


- Double click the menu button “M” to enter the main menu.
- Select the **Zeroing** option with the “+ / -” button. Short press menu button “M” to enter **Zeroing**.
- The icon will be turned into blue when **Zero Profile** is selected.
- Please refer to the **ZEROING** section for detailed guidance for zeroing.

 Hotspot / Bluetooth

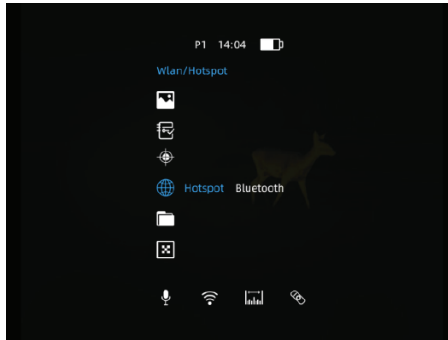

Turn Hotspot function on/off


 
- Double click the menu button “M” to enter the main menu.
- Select the **Hotspot** option with the “+ / -” button. Short press menu button “M” to enter **Hotspot** Settings.
- The icon will be turned into blue when **Hotspot** is selected.
- When **Hotspot** is on, it can be connected with “ThermTec Outdoor” APP. The default password is 12345678.

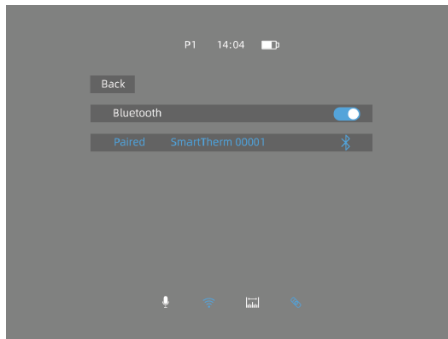

Turn the Bluetooth on/off

- Connecting the remote with Bluetooth is also available here.
- After connecting, the device could be controlled via the remote.

 
 
File

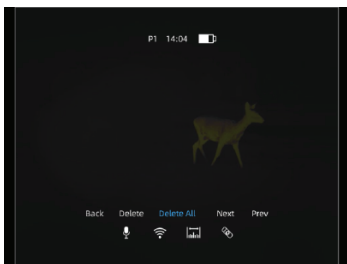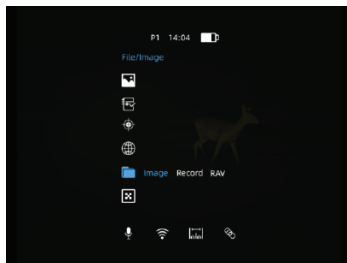

Check the Captured Images

- Double click the menu button **M** to enter the main menu.
- Select the **File** option with the + / - button. Short press menu button **M** to enter **File**.
- The icon will be turned into blue when **File** is selected.
- Click **M** to enter image files.
- After selecting a certain image, click **M** to access further operation of the image. You may delete it, check next one or delete all the images.

  
File

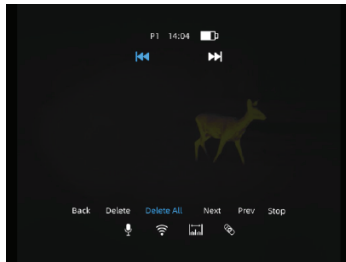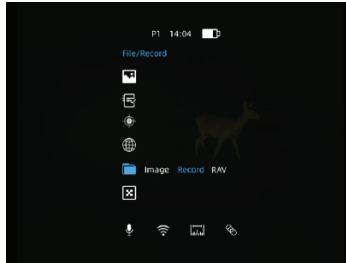

Check the Recorded Videos/RAV Videos



 
- Double click the menu button **M** to enter the main menu.
- Select the File option with the + / - button. Short press menu button **M** to enter File.
- The icon will be turned into blue when File is selected.
- Select **Record/RAV** and click **M** to enter **Video/RAV** Files.
- Choose a certain video and press **M** to check the video.
- Further operation could be accessed here. You may delete it, check next one, pause it or delete all the videos.

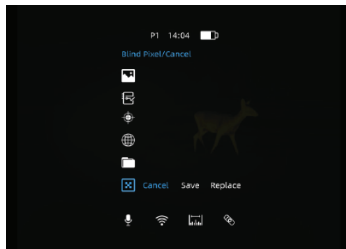Blind Pixel




Turn Blind Pixel function on/off

- Double click the menu button “**M**” to enter the main menu.
- Select the **Blind Pixel** option with the “+ / -” button. Short press menu button “**M**” to enter **Blind Pixel**.
- The icon will be turned into blue when **Blind Pixel** is selected.
- Select the blind pixel and confirm the selection of Cancel, Save or Replace.

<p>Blind Pixel</p> 	<p>Please follow the steps below to remove the blind pixels.</p> <ul style="list-style-type: none"> ● Close the lens cover. ● Keep clicking the Replace. ● Once there is any blind pixel removed, click save. ● Repeat the above process until remove all the blind pixels.
<p>OLED</p> 	<div data-bbox="323 329 713 618"> </div> <p>Set OLED</p> <ul style="list-style-type: none"> ● Double click the menu button “M” to enter the main menu. ● Select the OLED option with the “+ / -” button. ● Short press menu button “M” to enter OLED. ● The icon will be turned into blue when OLED is selected. ● Confirm OLED color and brightness level. ● There are 4 palettes optional: Grey, Blue, Purple and Red. ● Short press the Menu button “M” to exit, or press and hold the “M” to exit.
<p>RAV</p> 	<div data-bbox="323 683 713 972"> </div> <p>Turn RAV function on/off</p> <ul style="list-style-type: none"> ● Double click the Menu button “M” to enter the main menu. ● Select the RAV option with the “+ / -” button. Short press menu button “M” to enter RAV. ● The icon will be turned into blue when RAV is selected. ● The default value is 180, the threshold ranges from 50 to 210, this value was drawn under general test, if there is a silencer, it's advised to further reduce the value, of course, the lower the value is, the easier the RAV will be triggered.

 
Date/Time

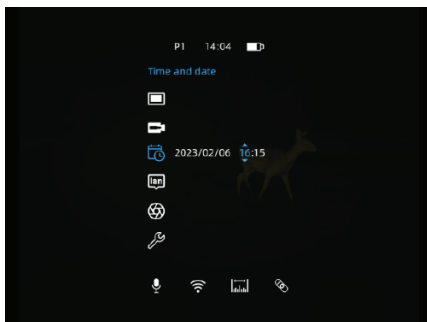

Set Time

- Double click the menu button “M” to enter the main menu.
- Select the Time option with the “+ / -” button.
- Short press menu button “M” to enter Time.
- The icon will be turned into blue when Time is selected.
- After entering the Date/time setting page, you can set a specific time.
- Short press the menu button “M” to exit, or press and hold the “M” to exit.

 
Language

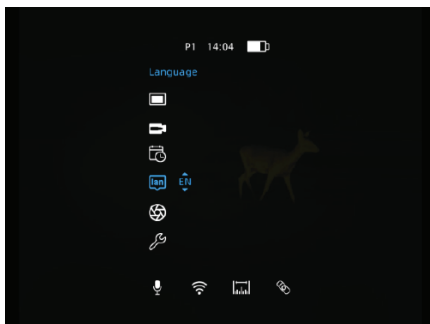

Set Language

- Double click the menu button “M” to enter the main menu.
- Select the **Language** option with the “+ / -” button.
- Short press menu button “M” to enter **Language**.
- The icon will be turned into blue when **Language** is selected.
- Short press the menu button “M” to exit, or press and hold the “M” to exit.

 
Correction

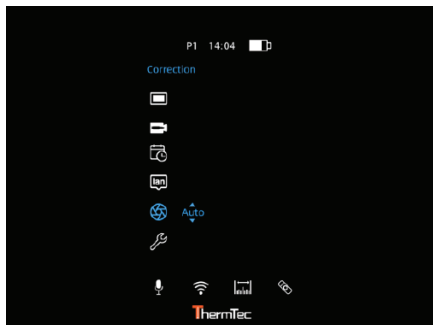

Turn Correction on/off

- Double click the menu button “M” to enter the main menu.
- Select the Correction option with the “+ / -” button. Short press menu button “M” to enter Correction.
- The icon will be turned into blue when Correction is selected.
- Choose Auto or Manual to enter the mode of auto correction or manual correction respectively.
- Under auto correction mode, the image would be calibrated automatically as per the actual conditions. It would count down from 5s every time when the image is under auto correction. The screen would freeze when the image is under correction.
- Short press the menu button “M” to exit, or press and hold the “M” to exit.

 
System

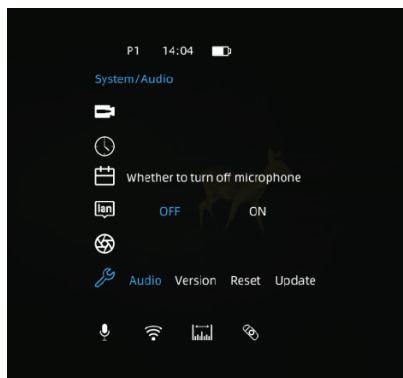

Turn on/off the Audio

- Double click the menu button “M” to enter the main menu.
- Select the Correction option with the “+ / -” button. Short press menu button “M” to enter **Correction**.
- The icon will be turned into blue when **Correction** is selected.
- Choose **OFF/ON** to turn off or turn on the audio.

 System

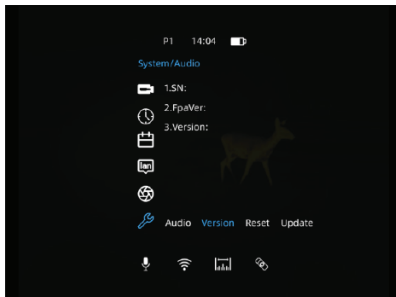

System setting

- Double click the menu button “M” to enter the main menu.
- Select the **System** option with the “+ / -” button. Short press menu button “M” to enter **System**.
- The icon will be turned into blue when **System** is selected.
- After entering the system settings, you can choose to reset or upgrade. Information like firmware version, serial number and other relevant information could be checked on the reset page.
- It only supports upgrading via PC on this page.
- Short press the Menu button “M” to confirm current settings, or press and hold the “M” to exit.

Ref.Line



Reference Line Setting

 
- Double click the menu button “M” to enter the main menu.
- Select the Ref.Line option with the “+ / -” button. Short press menu button “M” to enter Ref.Line.
- The icon will be turned into blue when Ref.Line is selected.

Ref.Line



- The reference line can be set here so that we can see it in the video recordings.
- Commonly, we can set the reticle type, color and coordinates, of course, it can also be saved as different profiles.


Palettes

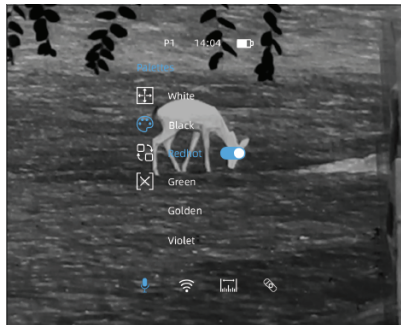

Palettes Setting

- Double click the menu button “M” to enter the main menu.
- Select the Palettes option with the “+ / -” button. Short press menu button “M” to enter Palettes.
- The icon will be turned into blue when Palettes is selected.
- You can customize the most frequent used colors from the 6 colors.

 Eyepiece Type

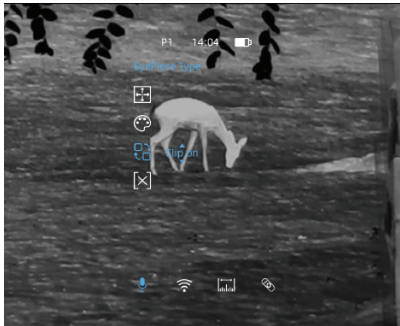


Set Eyepiece Type

- Double click the menu button “M” to enter the main menu.
- Select the Eyepiece Type option with the “+ / -” button.
- Short press menu button “M” to enter Eyepiece Type.
- The icon will be turned into blue when Eyepiece Type is selected.
- With the eyepiece component, you can also change the Clip-on series into a Monocular.



 Shutdown

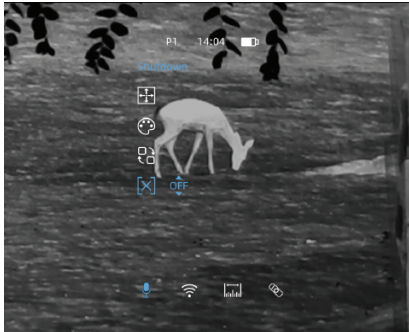


Shutdown Settings

- Double click the menu button “M” to enter the main menu.
- Select the Shutdown option with the “+ / -” button.
- Short press menu button “M” to enter Shutdown.
- The icon will be turned into blue when Shutdown option is selected.
- The Hunt Pro can be set to automatically turn off after 30/60/120 minutes, of course, the feature can be turned off too.


8.ZEROING

When the Hunt Pro is installed on the day scope properly, if the reticle of the day scope is not at the center of the infrared image, the image zeroing function can be used to shift the infrared image to ensure the position consistency between the day scope image and the infrared image.

 
- Please finish the correction of the day scope before mounting the Hunt Pro.
- Install the Hunt Pro on the day scope referring to the **Installation** section.
- Aiming at the 100m target and shoot.
- On the home screen, double click Menu button “**M**” to enter the main menu interface.

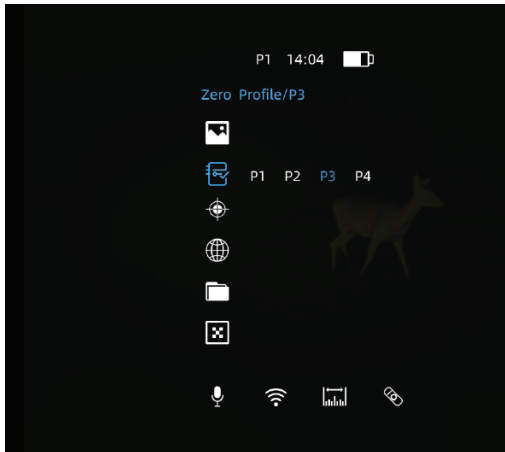

 - Press the “+ / -” button to move the cursor up or down, and select the Zero Profile option and choose a **zero profile** with a short press of the menu button “**M**”.

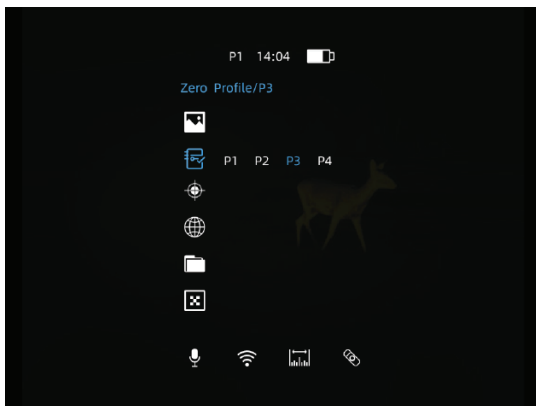

 - Select the Zeroing option and short press the Menu button “M” to enter the zeroing interface.

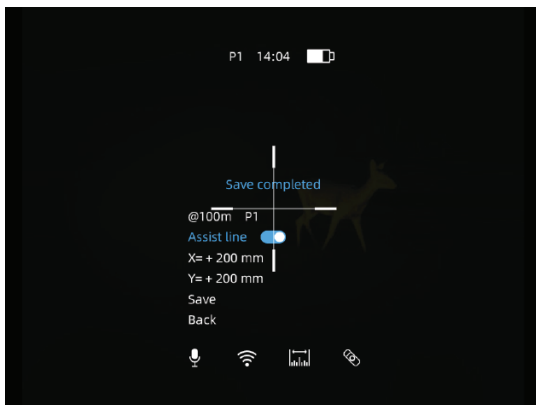


- At the zeroing interface, short press the “+ / -” button to move the position of infrared image until the target observed by the combined thermal imaging and white light sight coincides with the target observed by the white light sight alone, with a default zero distance of 100 meters.

- When entering the zero settings, short press the menu button “M” to confirm the set parameters and exit the page turning, or press and hold menu button “M” to exit the page and restore to the default settings.

9.CAPTURING AND RECORDING

There is built-in 64GB storage space set for image capturing and video recording. The files of images and videos will be named by time, so it is recommended to set the time in the main menu or synchronize the time in the settings of “ThermTec Outdoor” APP before using the image capturing and video recording function.

 Image Capturing

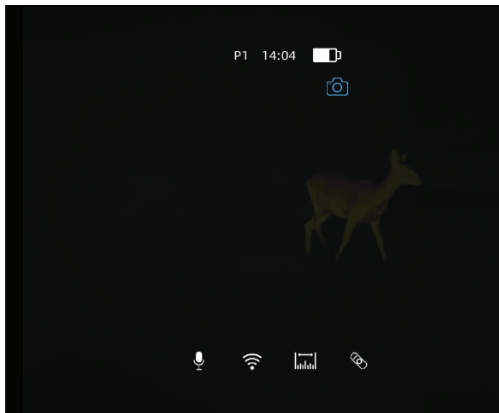


- Press the camera button “M” to take a photo and a capture icon appears on the screen.

- Images are saved in the built-in storage space.

Video recording

 - Press and hold down the camera button “M” to start a video recording.

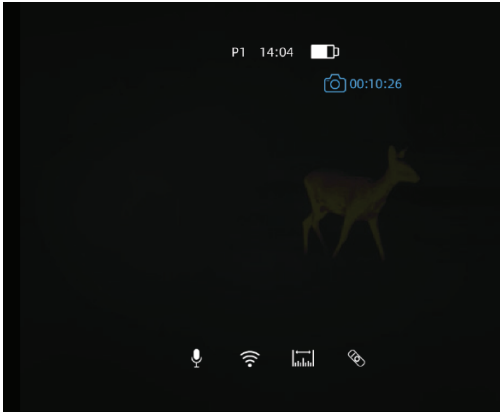

- A recording timer displays on the top of the screen. The time format is HH:MM:SS (Hour:Minute:Second).

- You may enter the menu and enable other functions during video recording.
- Press and hold down the camera button “M” to stop and save the recording.
- The videos are saved in the built-in storage space.

Caution:

- The number of the recorded files is limited by the capacity of the internal memory.
- Check the available space of the built-in storage card regularly and move the footage to other storage media to free up the memory card space.

10.MEMORY ACCESS

 
When the device is turned on and connected to a computer, it is recognized by the computer as a flash memory card, which is used to access the device's memory and make copies of pictures and videos.

- Turn on the Hunt Pro and connect it with the computer via Type-C cable.
- Images and videos are saved separately in the folders of “Capture” and “Record”.
- RAV videos are saved in the file named RAV.
- There are different images and videos named by time in the storage.
- Select desired files or folders to copy or delete.


11.HOTSPOT FUNCTION

A built-in hotspot module is integrated in the Hunt Pro, which enables the device to connect wirelessly to external devices such as smart phones.

- Double click Menu button “M” to enter the main menu.

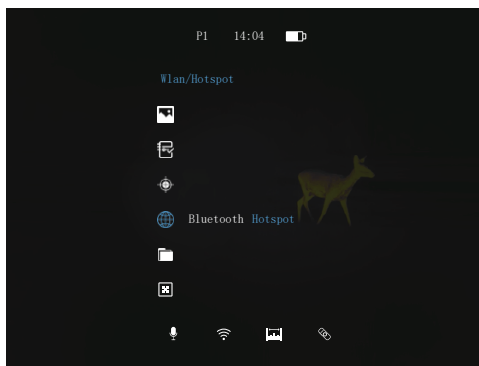

 - Turn Hotspot function on /off with a short press of menu button “M”.

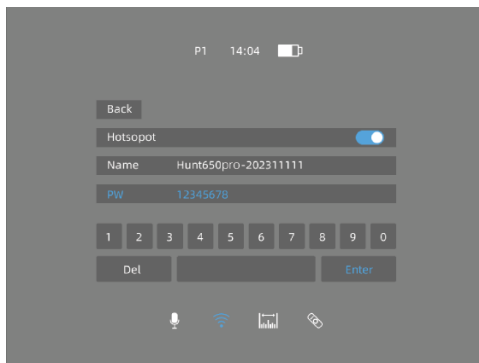

- Turn on “ThermTec Outdoor” APP, select Wi-Fi, and type in the password on the mobile device to finish the connection. The initial password is 12345678.

 
- When Wi-Fi is successfully connected, you can control the device via “ThermTec Outdoor” APP.

Set the Hotspot name and password

The Hunt Pro series allows users to change the name and password of device hotspot in the Hotspot settings.

12.REMOTE CONTROL


Hunt Pro series, which takes no attachment over device's surface, boasts of eminent ring-control design to better operate the device itself. It could connect the device via Bluetooth.

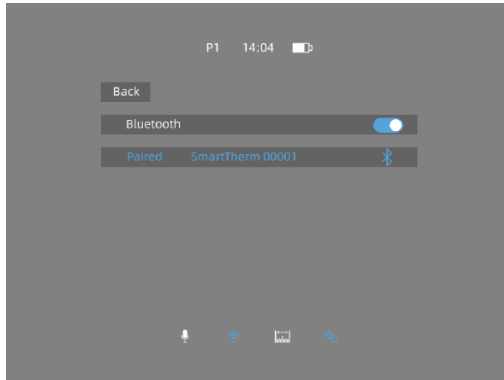

- Turn on the Bluetooth of your device.



 - Open the battery case of the remote and await it detecting around to check the Bluetooth of your device.

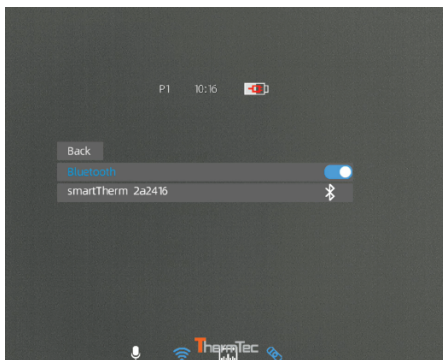

- After connection, you can control the Hunt Pro remotely.

- The remote control can be used continuously for more than 10 hours in one time and it could reach almost 48 hours with the charging case.
- If the battery runs out, it will flash between red and blue, you may charge it directly through the charging case now, or charge the battery case and put the remote control into it to charge them at the same time.
- Once the device connects with one remote control, it wouldn't display or connect with other remote controls. Please unlock the pairing by pressing the M button for 10s before connecting with another remote control.

13.DOWNLOAD “ThermTec Outdoor” APP

You may download the “ThermTec Outdoor” APP through the QR code shown on the packing box, user manual or below.



14. TECHNICAL INSPECTION

A technical inspection of the device is recommended before use.

- Check the external appearance of the device (there should be no cracks in the casing).
- Check the condition of the lens and eyepiece (there should be no cracks, greasy spots, dirt or other deposits).

15. MAINTENANCE

Maintenance should be carried out at least twice a year and consist of the following actions.

- Wipe the external surfaces of metal and plastic parts free of dust and dirt with a cotton cloth. Silicone grease maybe used for this.
- Check the glass surfaces of the eyepiece and the lens. If necessary, remove dust and sand from the lenses (preferably using a non-contact method). Cleaning of the external surfaces of the optics should be done with substances designed especially for this purpose.

16. FIRMWARE UPGRADE

Hunt Pro series thermal clip-on is supported by the “ThermTec Outdoor” APP, which allows you to transmit the images and videos from the device to the smartphone or tablet via Hotspot in real time.

The electronic version of this User Manual and the latest firmware can be downloaded from the ThermTec website: www.thermeyerotec.com. Firmware upgrade can also be finished via the “ThermTec Outdoor” APP.

Upgrading via APP

- Enter the ThermTec Outdoor APP.

 
- After connection, the APP will show if there is available firmware update.
- Before downloading the firmware, please turn on your mobile data.
- After downloading the firmware and prepare for upgradation, please turn off the mobile data for stable upgradation.
- After finishing the update, the device will reboot.

Upgrading via PC

- Please download corresponding upgrading package from official website. www.thermeyertec.com.




- Connect the device to PC via Type-c data cable.

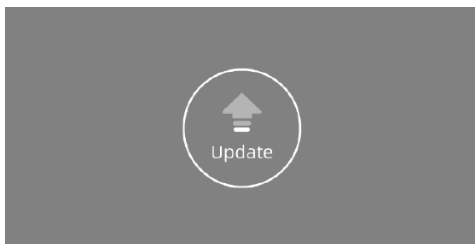

- Copy the related updating firmware to the file folder named storage of the Hunt Pro. Press “M” to select Update icon, and the system will prompt “Update”.
- Enter Version menu to check firmware version.
- Detailed instruction video can be found from the official channel.

17.HUNT PRO ACCESSORIES

Accessories	Name	Model	Specifications	Compatible Thermal Imaging Devices
	Battery Charger	PBC-5V2A-D1	Dimensions: 57*50*18mm Weight: 32g Input: 5V-3A Output: 4.4V-1.5A	Hunt Pro Series
	Li-ion Battery Pack	PBC-4.4V-3200	Rating: 3.85Vdc/3.2Ah (12.32wh) Charging limited Voltage:4.4V Dimensions: 55*49*13mm Weight: 59g	Hunt Pro Series
	Hunt eyepiece	H-M52	Exit Pupil: 6mm Exit Relief: 15mm Diopter Range: $\pm 5D$ Ocualr Magnification: 3X Mount Type: M52*0.75 Dimensions: 58mm*52.1mm Weight: 97 \pm 2g	Hunt/Hunt Pro Series

Note: The accessories can be purchased separately. Please consult your local dealers for pricing and availability.



ThermTec Technology Co., Ltd.
Email: info@thermeyerotec.com
Web: www.thermeyerotec.com



COPYRIGHT © 2023 ThermTec Technology Co., Ltd. ALL RIGHTS RESERVED.